




**GVS**  
GLOBAL VIDEOPHONE STANDARD™

# Installation


Before using your new VideoPhone, you must complete the steps below. Refer to the Owner's Manual for more detailed instructions and important safety information.

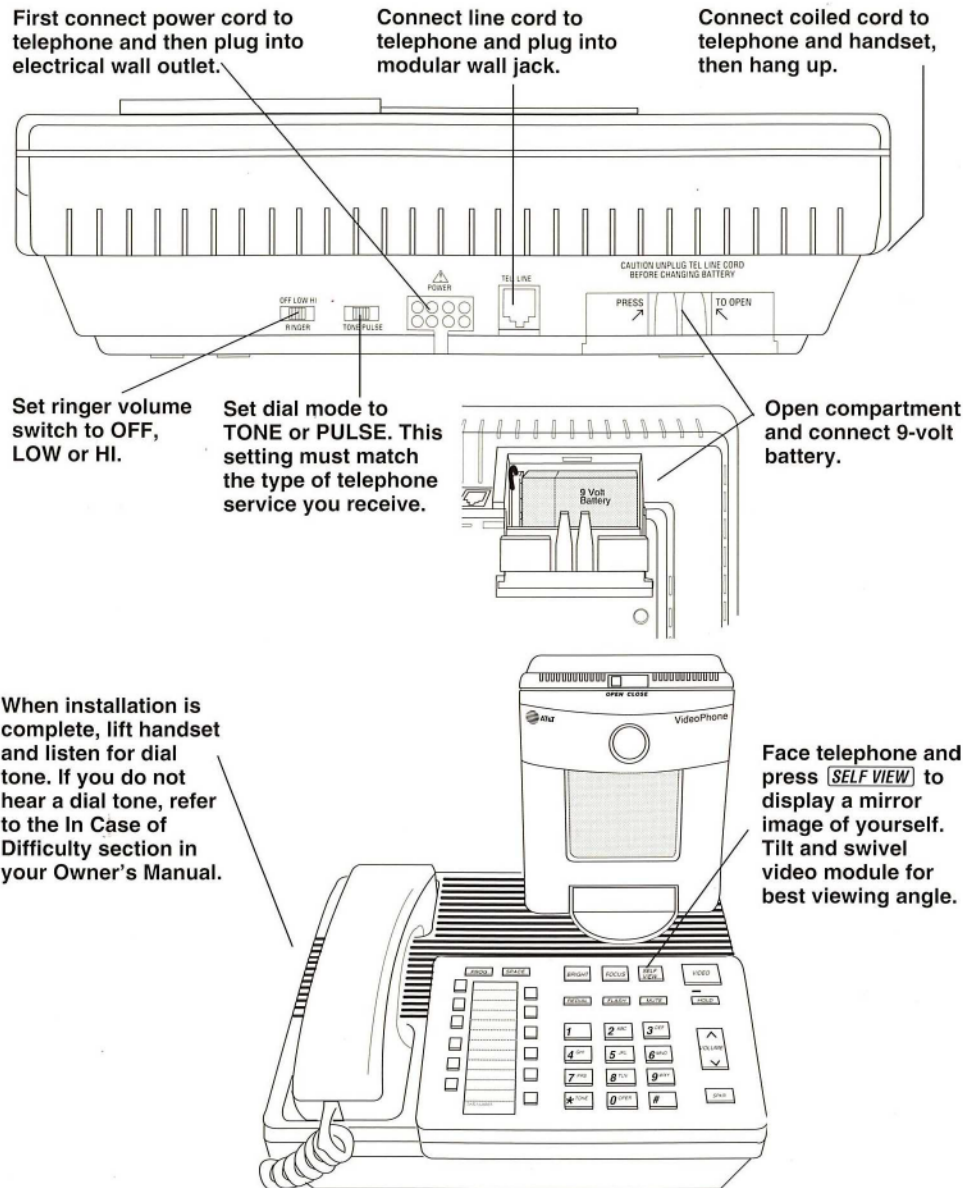

# Video Operation

Open camera shutter for normal use; close for privacy.

Tilt/swivel console for best viewing angle.

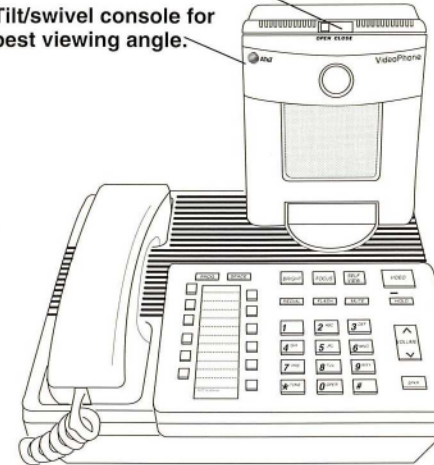

## Video Controls

### VIDEO

Make or answer call, then press **VIDEO** to begin sending your image to another VideoPhone.

### FLASH

Press **FLASH** during a call to stop sending your video image and continue talking.

### SELF VIEW

Press **SELF VIEW** to see mirror image of yourself before or during a call.

### BRIGHT

Press **BRIGHT**, then use **VOLUME** control to adjust screen brightness. Press **BRIGHT** when adjustment has been made.

### FOCUS

Press **FOCUS**, then use **VOLUME** control to adjust sharpness and motion smoothness of received images. Press **FOCUS** when adjustment has been made.

## Video Calls

1. Make or answer a call.
2. Press and release **VIDEO** to begin sending your video image. The other person must press **VIDEO** before you can receive images on your screen.
3. Hang up to end call. To stop sending video image and continue talking, press **FLASH** or close camera shutter.

## Video Adjustment

- To adjust video screen brightness, press **BRIGHT**, then use **VOLUME** control.
- To adjust image sharpness and motion smoothness, press **FOCUS**, then use **VOLUME** control.
- For maximum smoothness of motion without sound, press **PROG**, then press **MUTE** to activate silent video mode.

## Privacy Features

- Close shutter to block lens so you cannot be seen.
- Press **HOLD** to freeze your video image on the other person's screen so you cannot be seen or heard. Press again to restore both picture and sound.
- Press **FLASH** to stop sending video images and continue talking.

**IMPORTANT:** Never hold down buttons. Always *press and release* quickly.

# Telephone Operation

---

## Speakerphone (p. 13)

---

- To make a call, press **[SPKR]**, then dial.
- To answer a call, press **[SPKR]**, then begin talking.
- While using the speakerphone, you can replace the handset in the cradle.
- To hang up, press **[SPKR]**.

## Volume (p. 13)

---

Press up or down arrow on VOLUME control to increase or decrease listening level of speakerphone or handset.

## Redial (p. 14)

---

1. Lift handset or press **[SPKR]**.
2. Press **[REDIAL]** to dial the last number manually dialed.

## Mute (p. 15)

---

Press **[MUTE]** to silence microphone so you cannot be heard. Press again to resume conversation.

## Hold (p. 14)

---

1. Press **[HOLD]** to place a call on hold.
2. To resume conversation:
  - If handset is in use, press **[HOLD]**.
  - If speakerphone is in use, press **[SPKR]**, or lift handset from cradle.

During video calls, HOLD also freezes your video image on the other screen. Video will be lost if you lift handset of extension phone.

## Memory Programming (p. 18)

---

1. Press **[PROG]**.
2. Enter phone number.
3. Press memory button where you want to store number.
4. Press **[PROG]**.

## Memory Dialing (p. 18)

---

1. Lift handset or press **[SPKR]**.
2. Press memory button.

**IMPORTANT:** Never hold down buttons. Always *press and release* quickly.